


For CTC GSi 12, CTC EcoHeat 400, CTC EcoZenith i250, CTC EcoLogic Pro and CTC EcoZenith i550 Pro  
with software version from 20141120 with CTC SMS installed.

## First Login - Sign up

- Click **Sign up**.
- Select **Language**.
- Enter your **Email** and a **Password** for Login.
- Click **Sign up**.

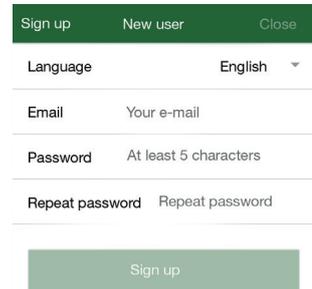

Sign up New user Close

Language English

Email Your e-mail

Password At least 5 characters

Repeat password Repeat password

Sign up



## Settings - Add new system

- Create a **Name** for the heating system.
- Enter the **Phone number** to your SMS controlled CTC device in the format of: +46111222333. Where 46 is the country code (for Sweden). Also, delete the first zero in the phone number.  
(For CTC Internet, use Serial number stated on the Internet module.)
- Press **Add**. If you want to include multiple heating systems then repeat the procedure.

Additional users are able to access the system by using the same log in details.

You can activate and deactivate the heating systems. To do this, use the slider and press Save to confirm with the heating system.

If activation of the heating system fails, the system will still be listed under **Settings/My heating systems**. Try to activate again and save from there. A non-active system is not working.

In the picture the My heating system is activated and the Summer house system is inactivated disabled.



Settings ctc

Language English

My heating systems

My heating system  Save

Summer house  Save


Delete heating system

Add new system

Name  
e.g 'My heating system'

## Confirm

A text message (SMS) will be sent from your CTC SMS device to the app, to confirm that the contact is established. Eurotariff means that from July 2014 the cost of this will not exceed € 0.06 including VAT within the EEA.

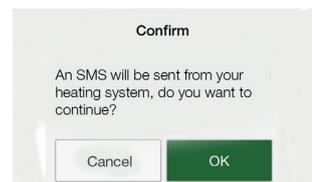


Confirm

An SMS will be sent from your heating system, do you want to continue?

Cancel OK

## Menu

Slide the page to the right or click on  to access the menu tree.

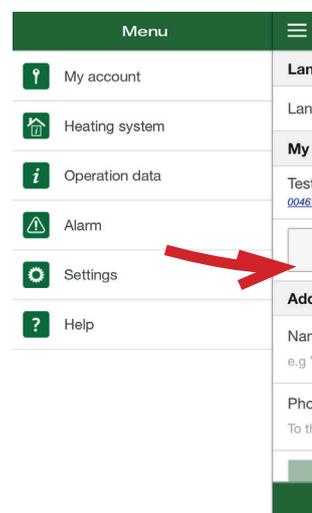

Menu

- My account Lan
- Heating system Lan
- Operation data My
- Alarm Test 0046
- Settings Add
- Help Nan e.g "
- Pho To tr



## My account

Manage your account details, E-mail and Password.

☰
My account
ctc

**Edit account data**

Email

---

Password

---

Change email

**Change password**

Current password

---

New password

---

Confirm new password

---

Change password

Logout



## Heating system

At the top right corner, select which heating system Settings are to be displayed. Below are the current outdoor temperature, Hot water settings or settings for Vacation Mode. Click on a row to change the set-point.

Below Heating system the temperature of each room is displayed. Click on a row to change the set-point.

If you made changes and want to save them, select Save Settings.

You can make more than one change and then save them all at once, by sending just one text message.

☰
Heating system
ctc

**Choose system** TestVp ▾

**General**

Outdoor temp. 0 °C

---

Hot water 60 °C >

---

Vacation mode Not active >

**Heating system**

Room 1 20°C (20°C) >

---

Room 2 21°C (20°C) >

---

Room 3 22°C (20°C) >

Updated 23 minutes ago



## Operation data

At the top right corner, select which of the heating system Operation data is to be displayed. See your installation- and maintenance manual for a detailed description of those parameters.

☰
Operation data
ctc

**Choose system** TestVP ▾

Outdoor temp 0 °C

---

Vacation mode 0 days

---

Temperature Room 1 20 °C(20 °C)

---

Temperature Room 2 21 °C(20 °C)

---

Temperature Room 3 22 °C(20 °C)

---

Heat. Sys. 1 Prim. Flow 47 °C(47 °C)

---

Heat. Sys. 2 Prim. Flow 36 °C(37 °C)

---

Heat. Sys. 3 Prim. Flow 28 °C(27 °C)

Updated 23 minutes ago



## Alarm

To see the latest alarms, the alarm list must be manually updated.

Some of the alarms can be reset from here.

The icon turns red if an alarm has occurred.

☰
Alarm
ctc

**Choose system** TestVP ▾

**Active alarms**

No active alarms  
2014-11-21 11:54

Update alarm list

Reset alarms